



FRONT

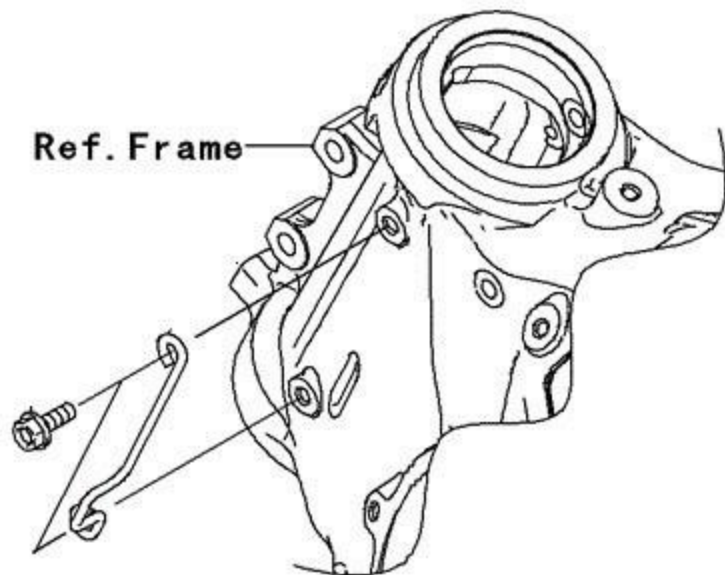


(Fig. 1)

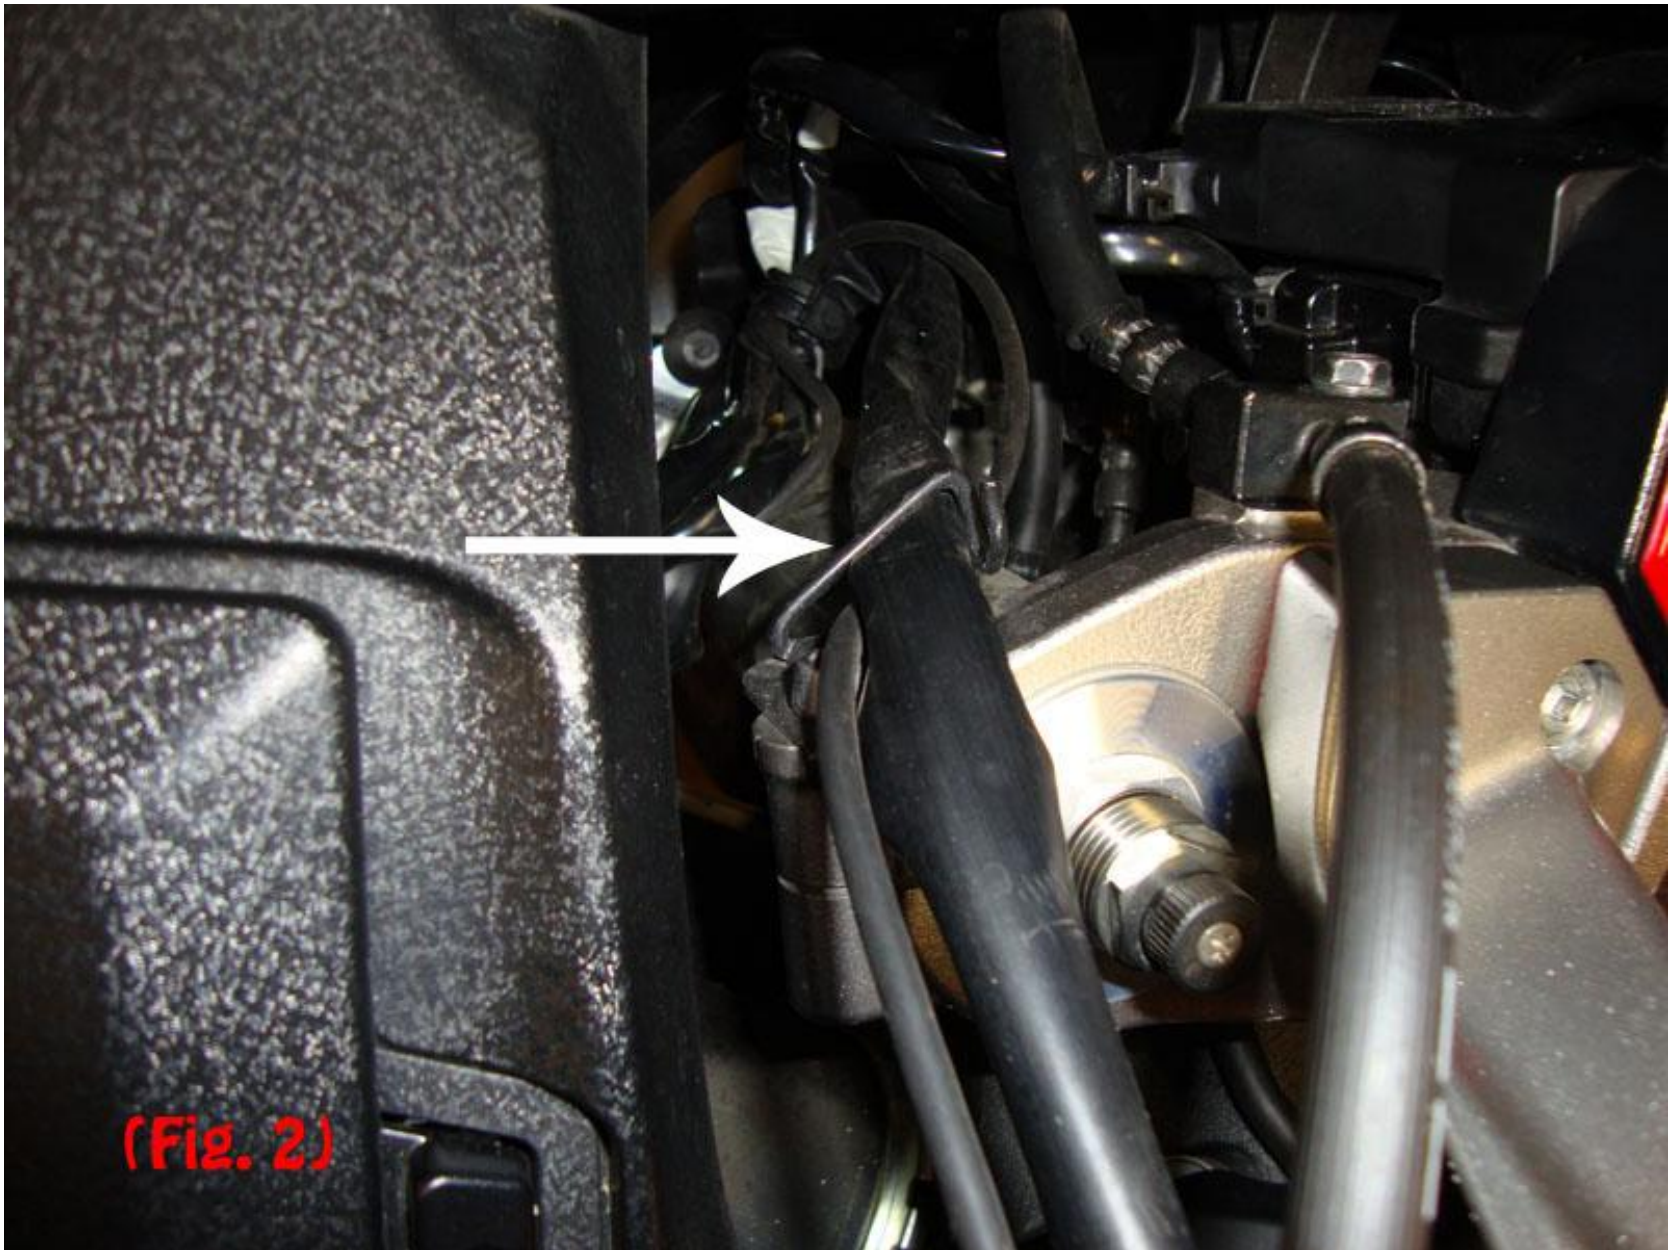

(Fig. 2)


Looking straight down the fairing between the gauge cluster and the triple tree.
This is an example of releasing the wire from the loom clamp.

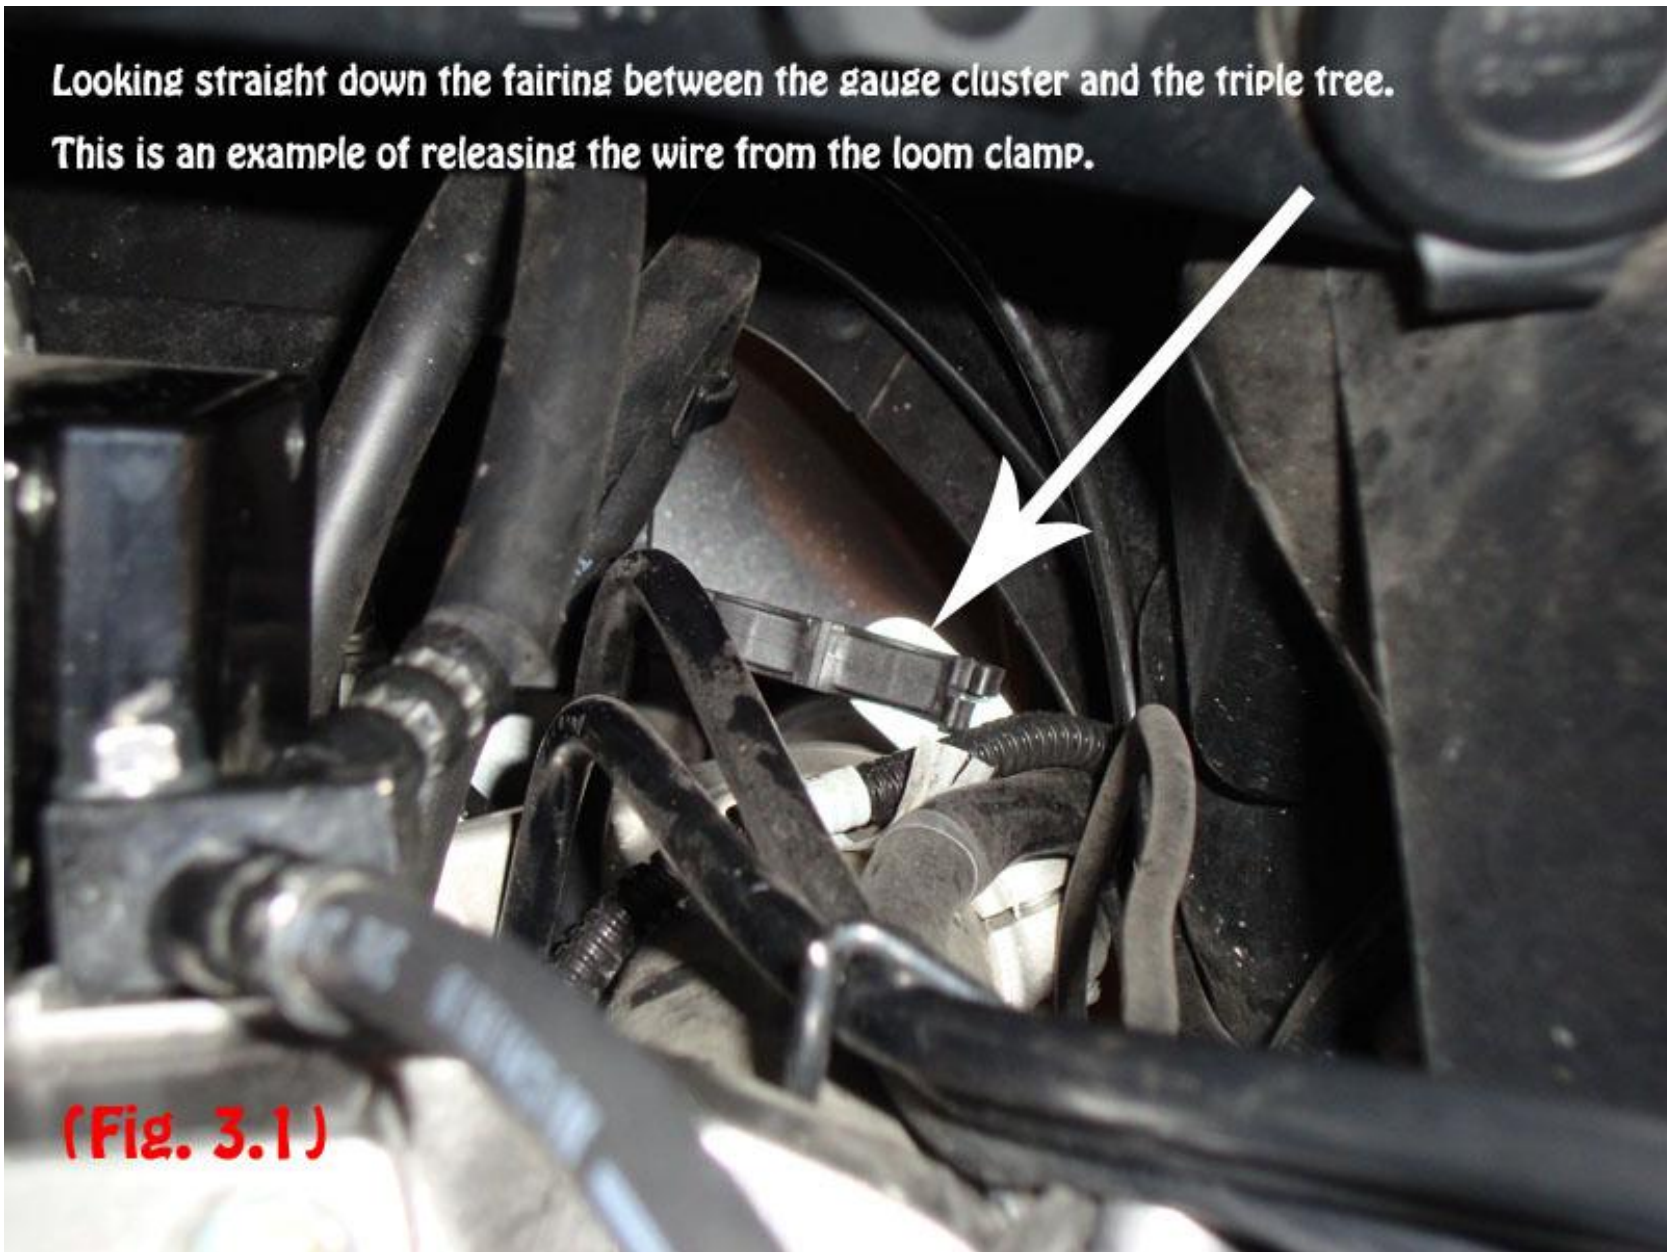


(Fig. 3.1)

Looking straight down the fairing opening between gauge cluster and triple tree.

This is an example of retaining the wireloom clamp and detaching it from the fastener.

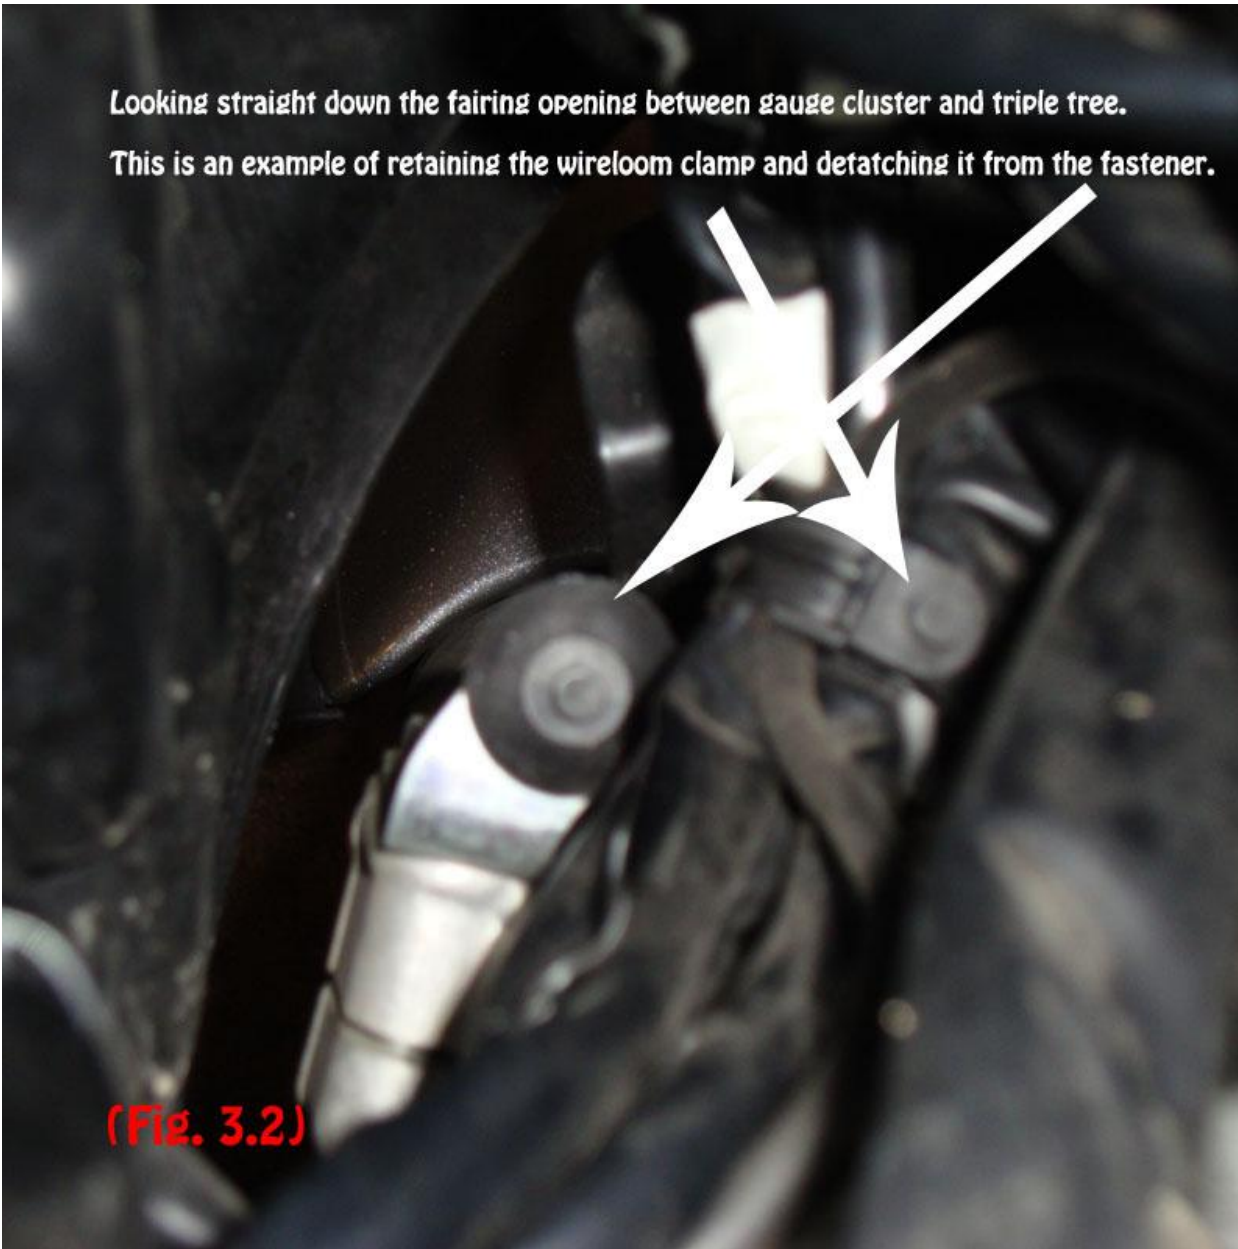


(Fig. 3.2)

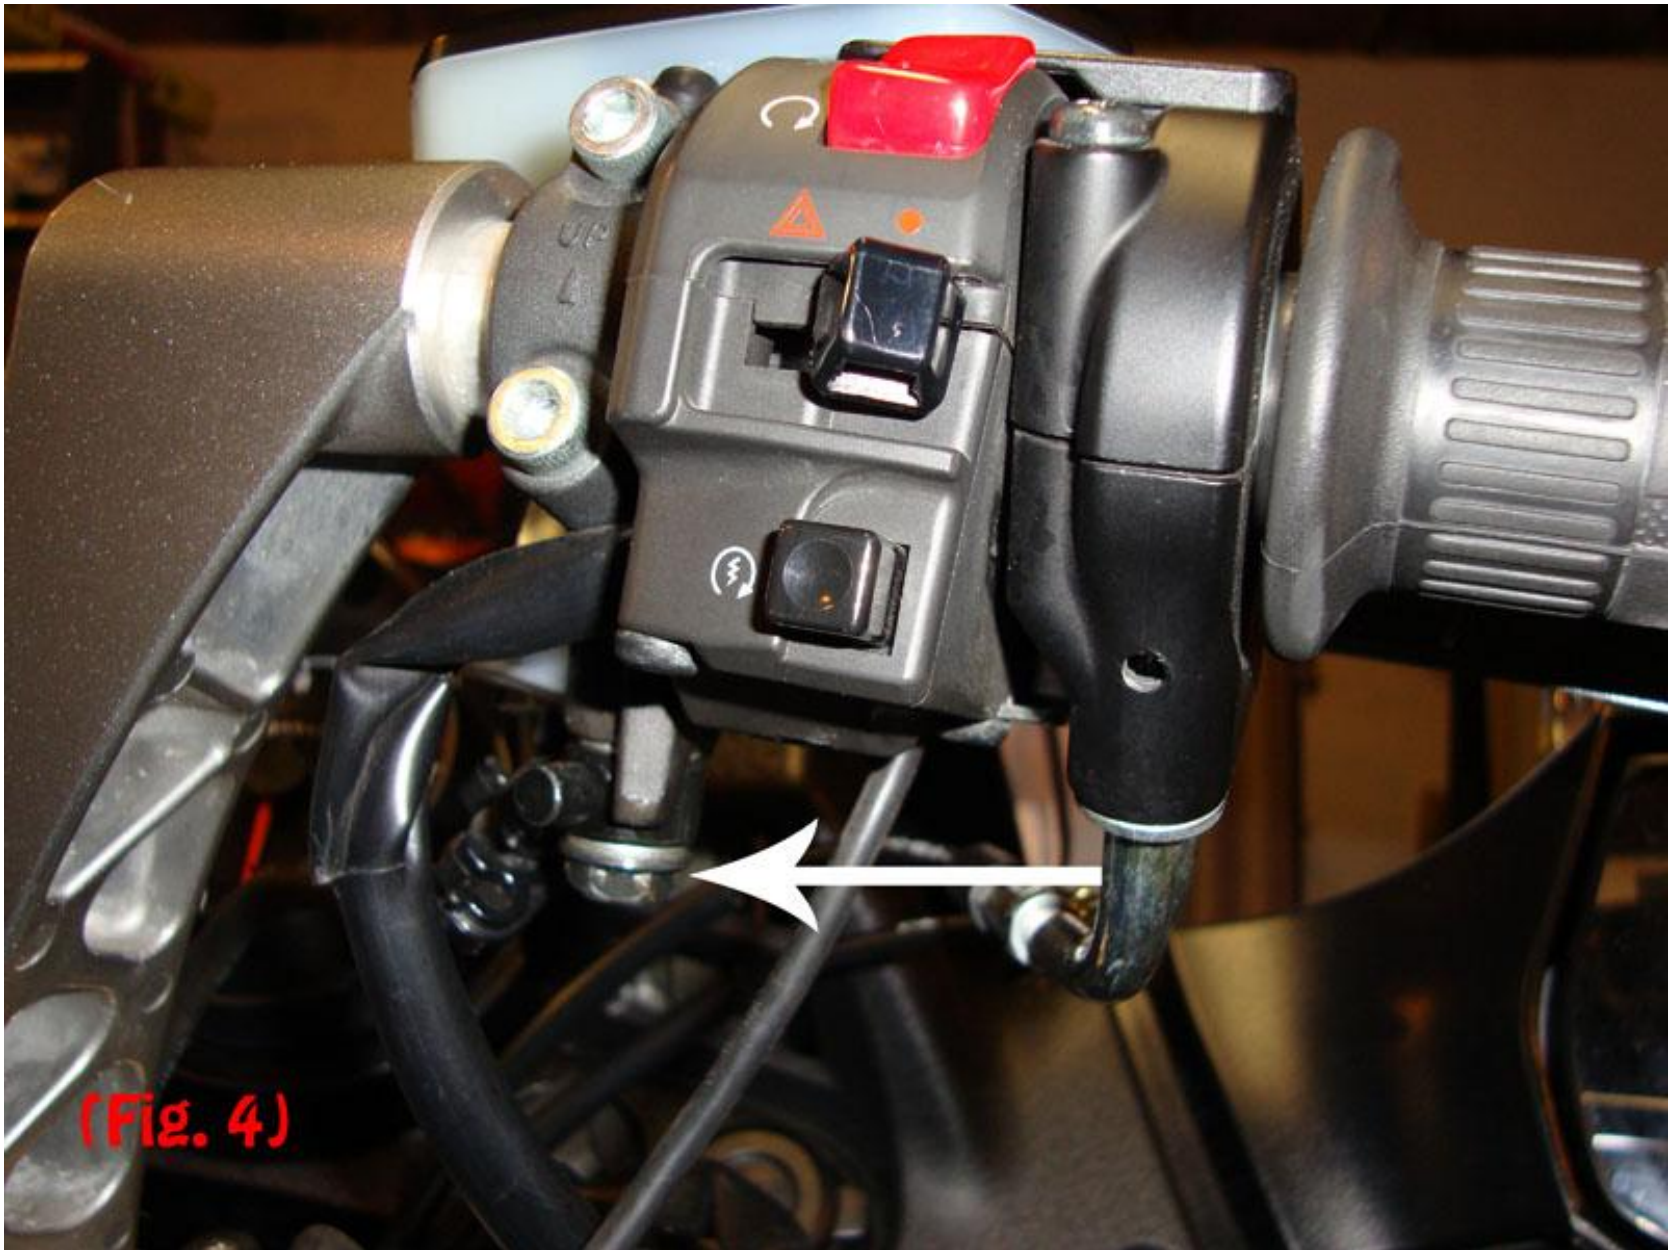

(Fig. 4)




(Fig. 5)

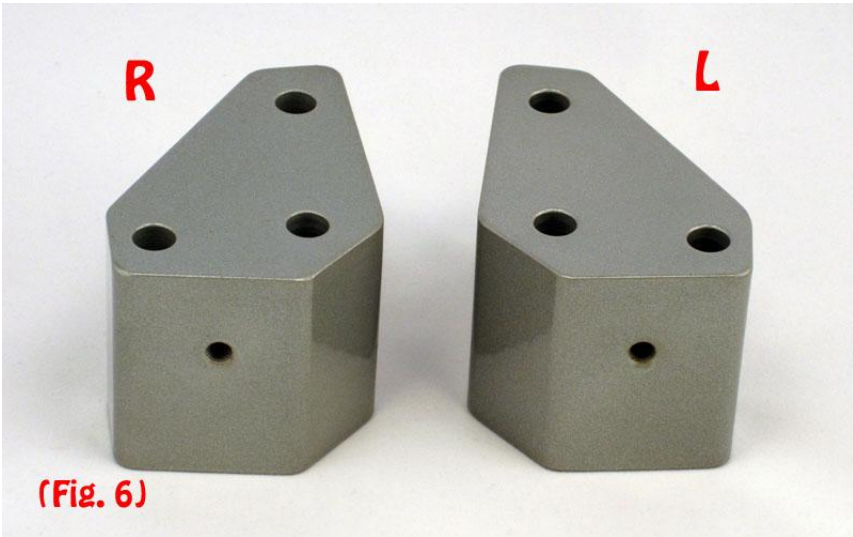

(Fig. 6)



(Fig. 7)

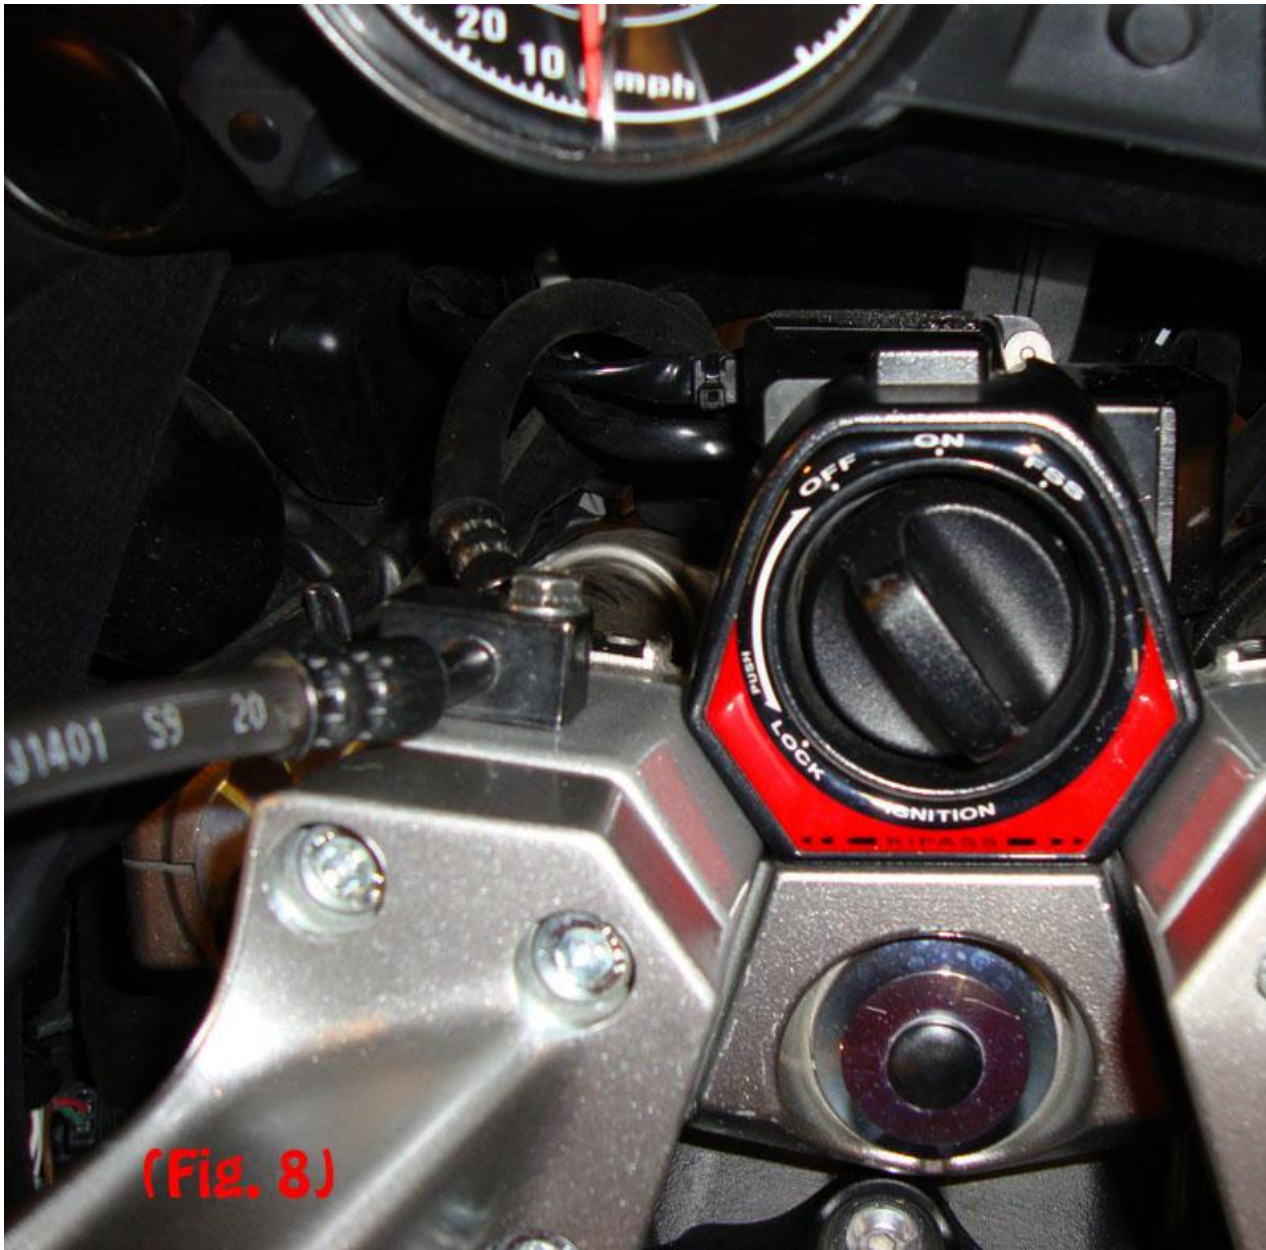

(Fig. 8)



(Fig. 9)



(Fig. 10)