

Silver Spacers

Black Spacers



OR



30mm Bolts



50mm Brake Bolts



50mm Bolts

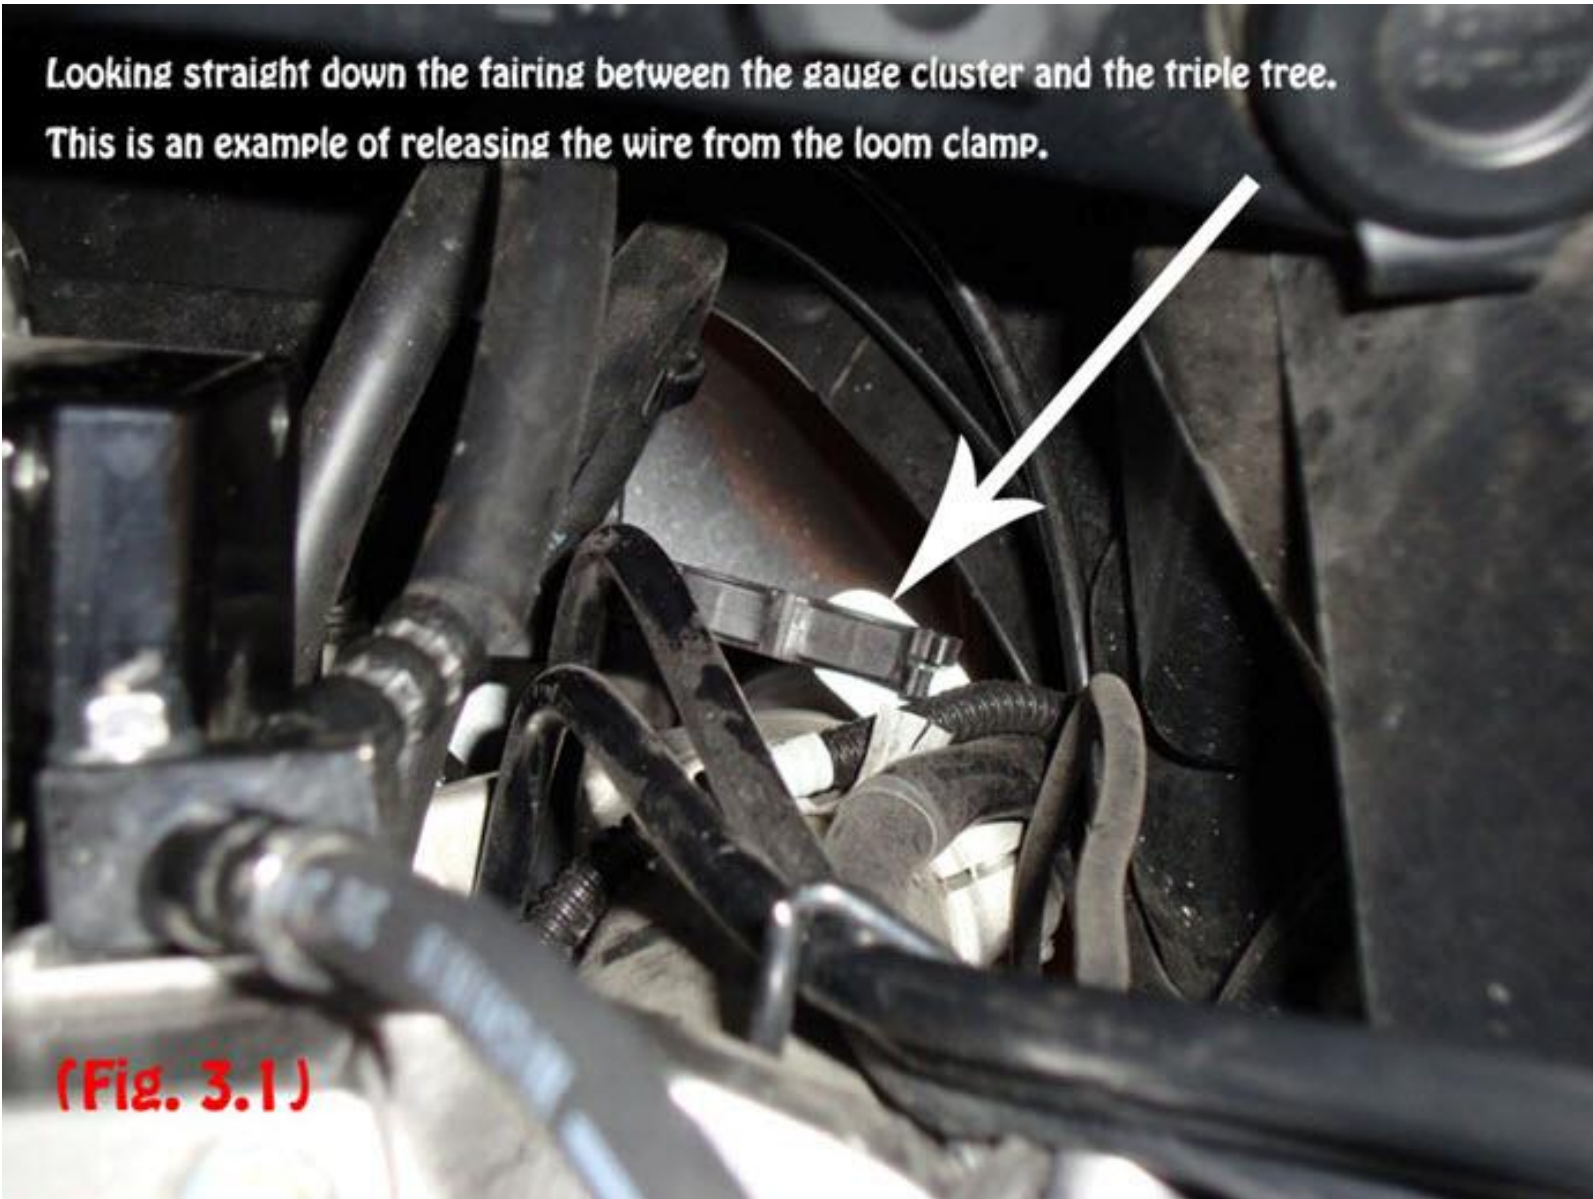


Fig. 1



Fig. 2


Looking straight down the fairing between the gauge cluster and the triple tree.
This is an example of releasing the wire from the loom clamp.




(Fig. 3.1)

Looking straight down the fairing opening between gauge cluster and triple tree.

This is an example of retaining the wireloom clamp and detaching it from the fastener.

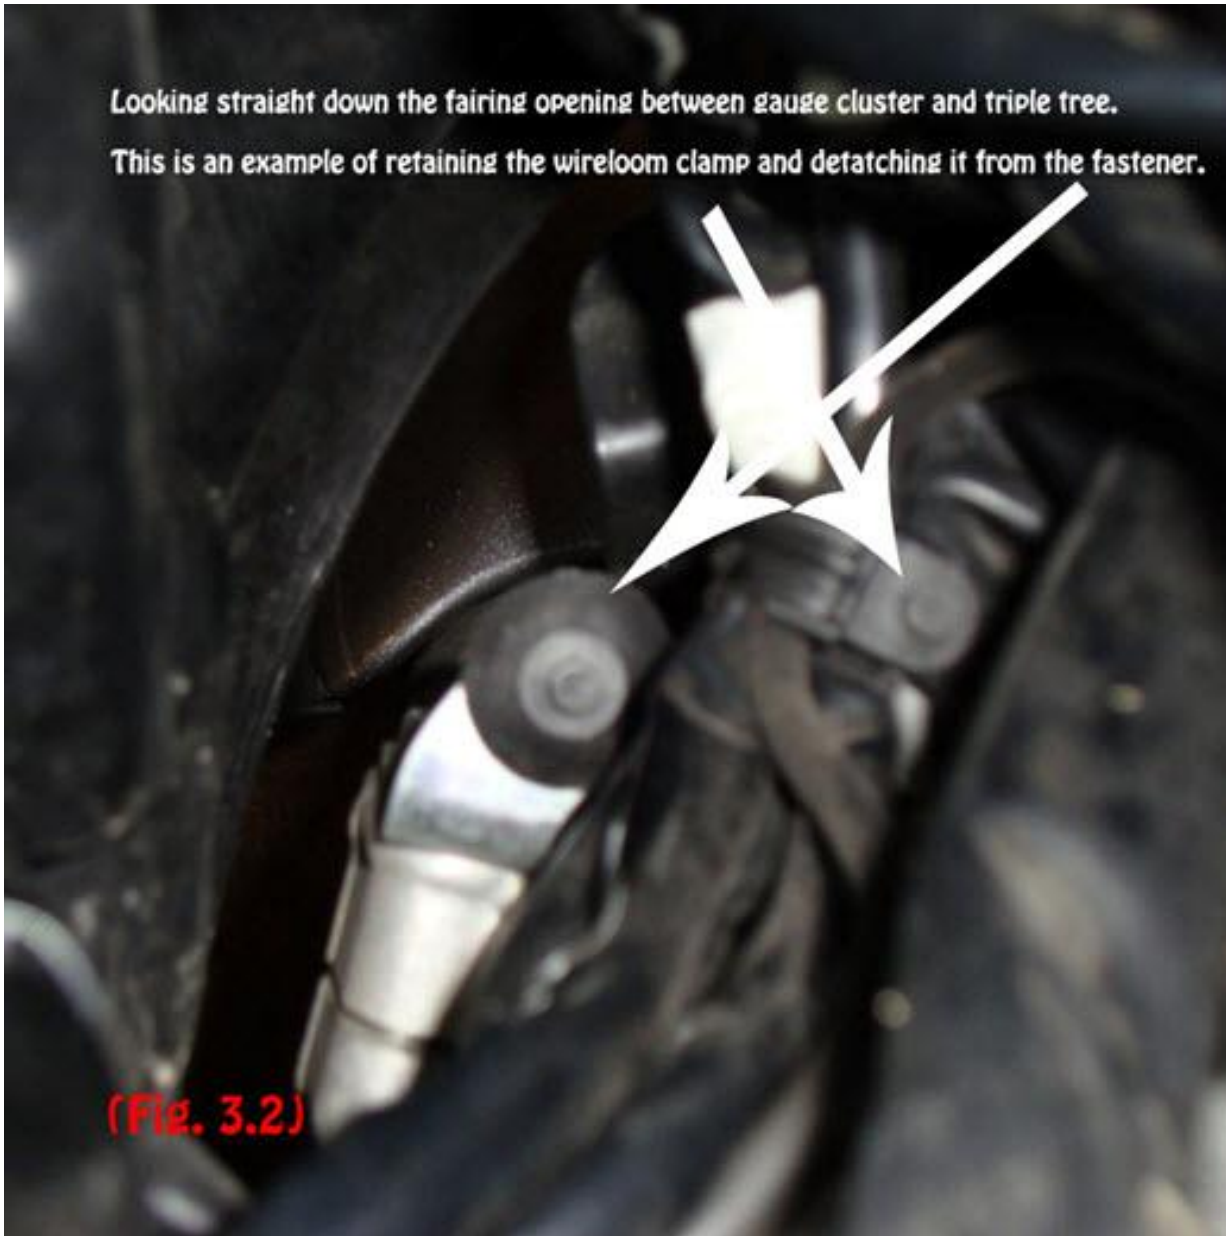

(Fig. 3.2)

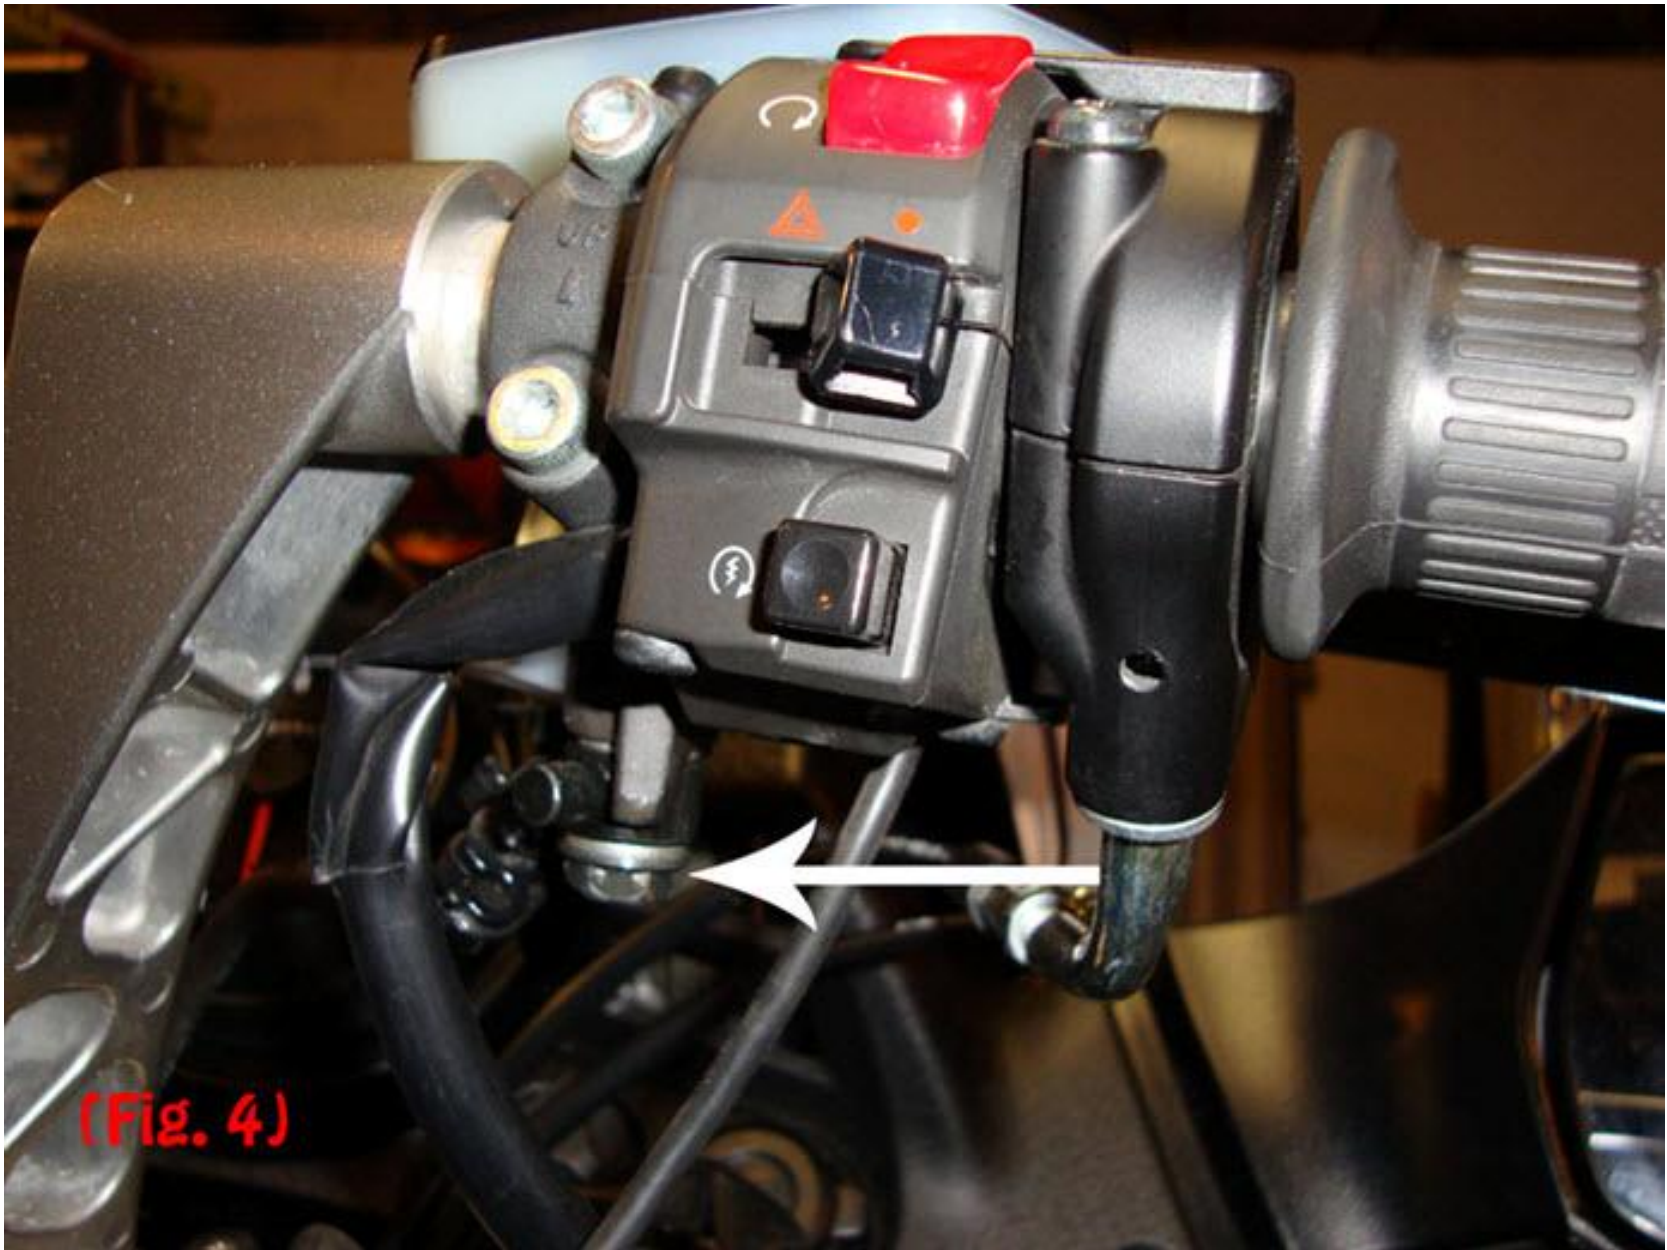

(Fig. 4)



(Fig. 5)



FIG. 6

LEFT

RIGHT



Fig. 7

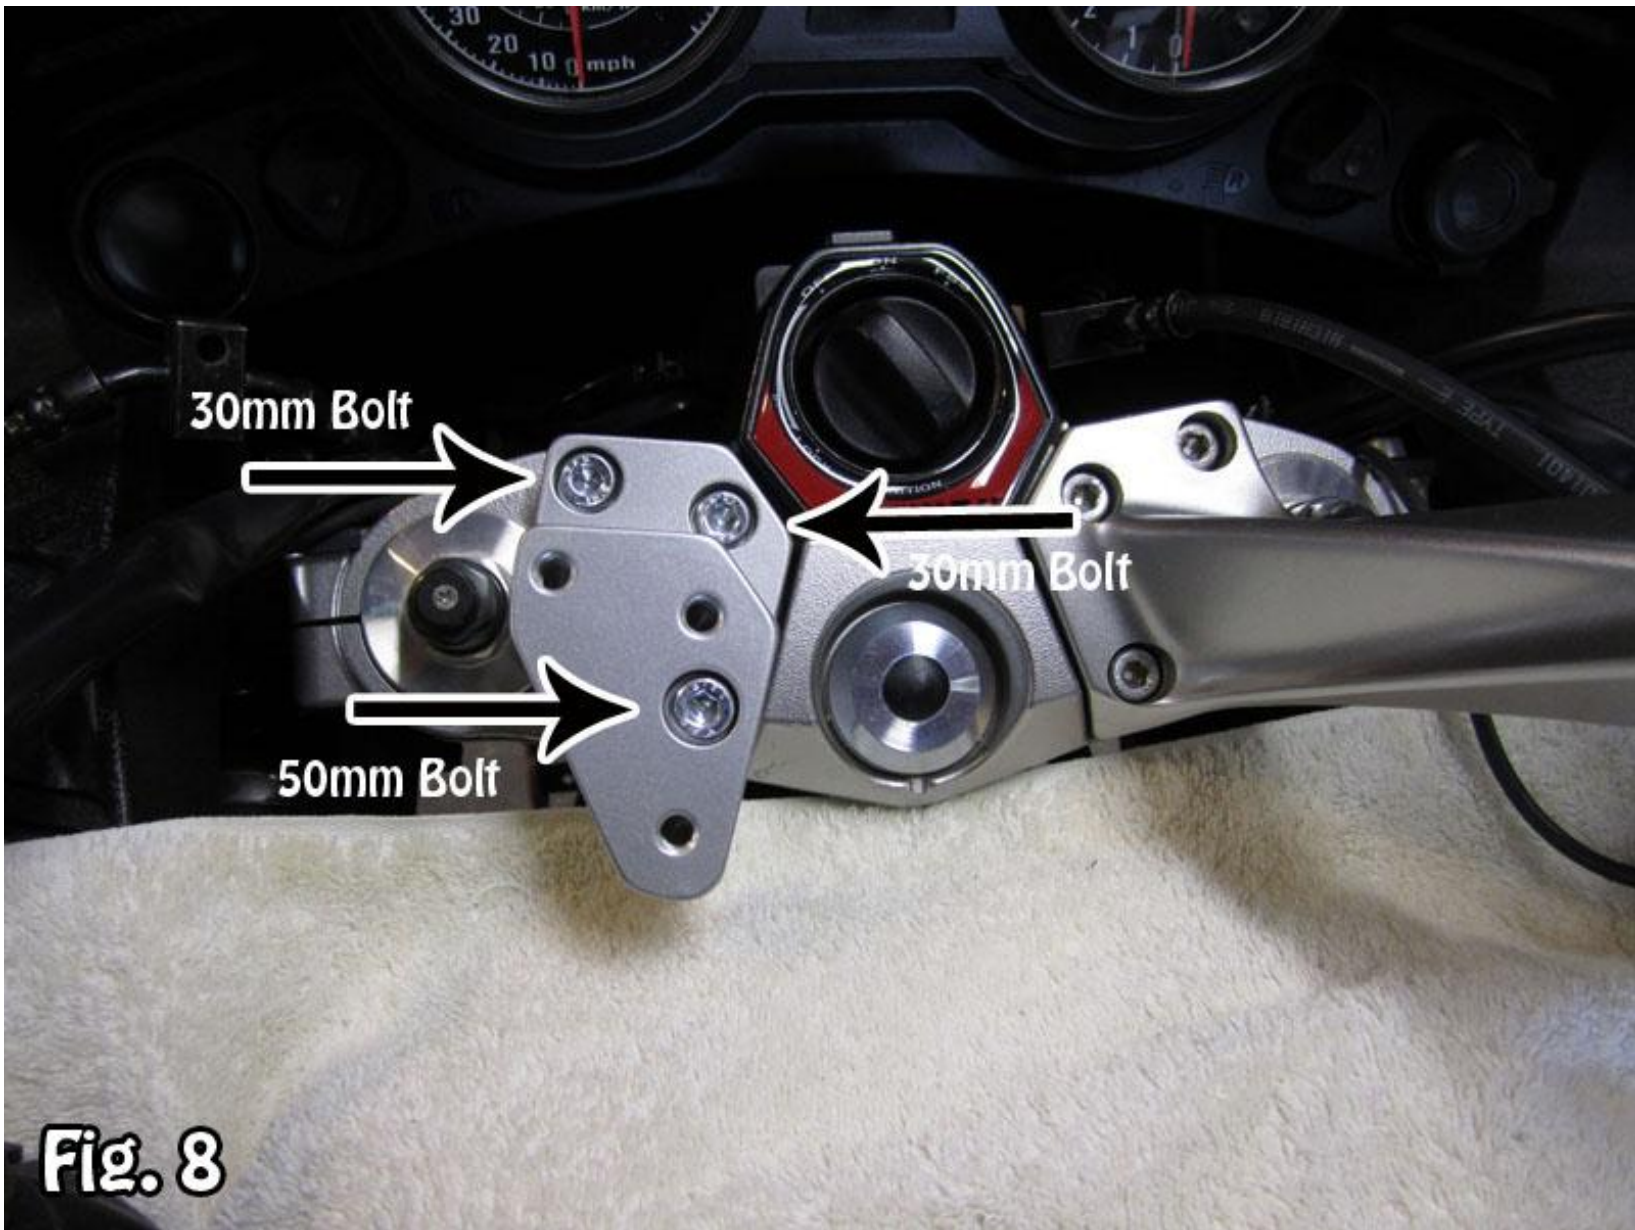


Fig. 8



Fig. 9



Fig. 10



Fig. 11